


SWING OUT COMBINATION FEEDER INSTALLATION INSTRUCTIONS

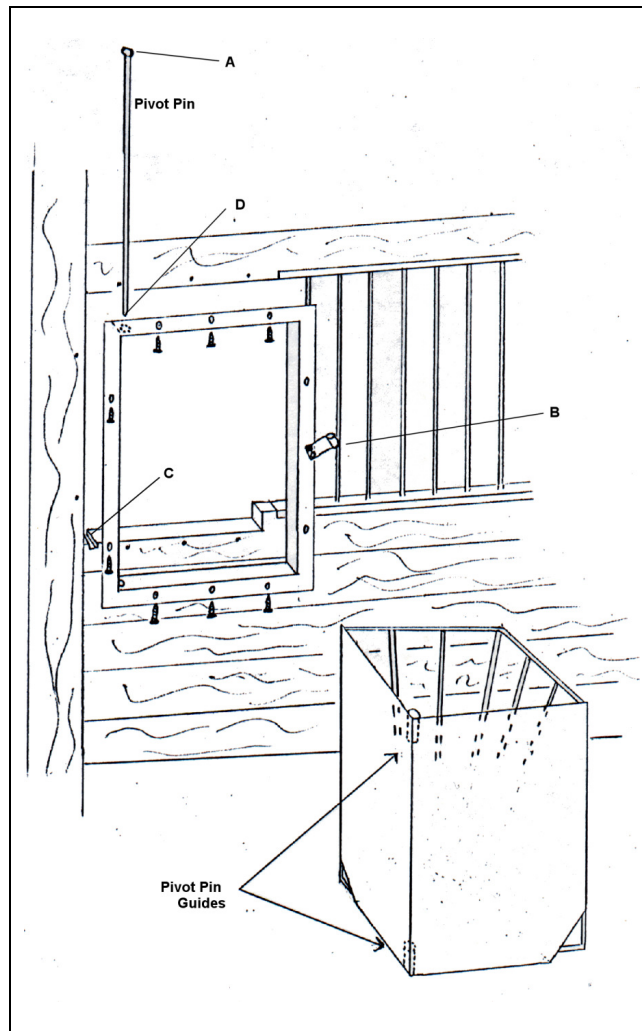

NOTE: Installation process may vary with different stall types.

This unit is designed so that it may be used on either the right or left hand corner of stall front simply by inverting the frame. The only changes that may be necessary are:

- 1: Make sure the pivot pinhead (A) is in the upward position.
- 2: When the latch is in the open position (B) the upper most hole is being used.
- 3: Pivoting corner of combination feeder is in the corner of the stall.

The opening in the front of the stall for the feeder must be 37" high by 22" wide. Be sure to make a notch about 3/4" deep (C) for the bottom of the pivot pin (D).

5/16" lag bolts are supplied to mount unit. It may be desirable to use a wood screw with a smaller head if interference with a sliding door occurs. Pre drilling for the lag bolts may make them easier to insert.



Country Manufacturing, Inc.

P.O. Box 104

Fredericktown, OH 43019

PH: 740-694-9926

FAX: 740-694-5088