


# DOOR GUARD MODEL CM 85, CM 86, AND CM 87 INSTALLATION INSTRUCTIONS

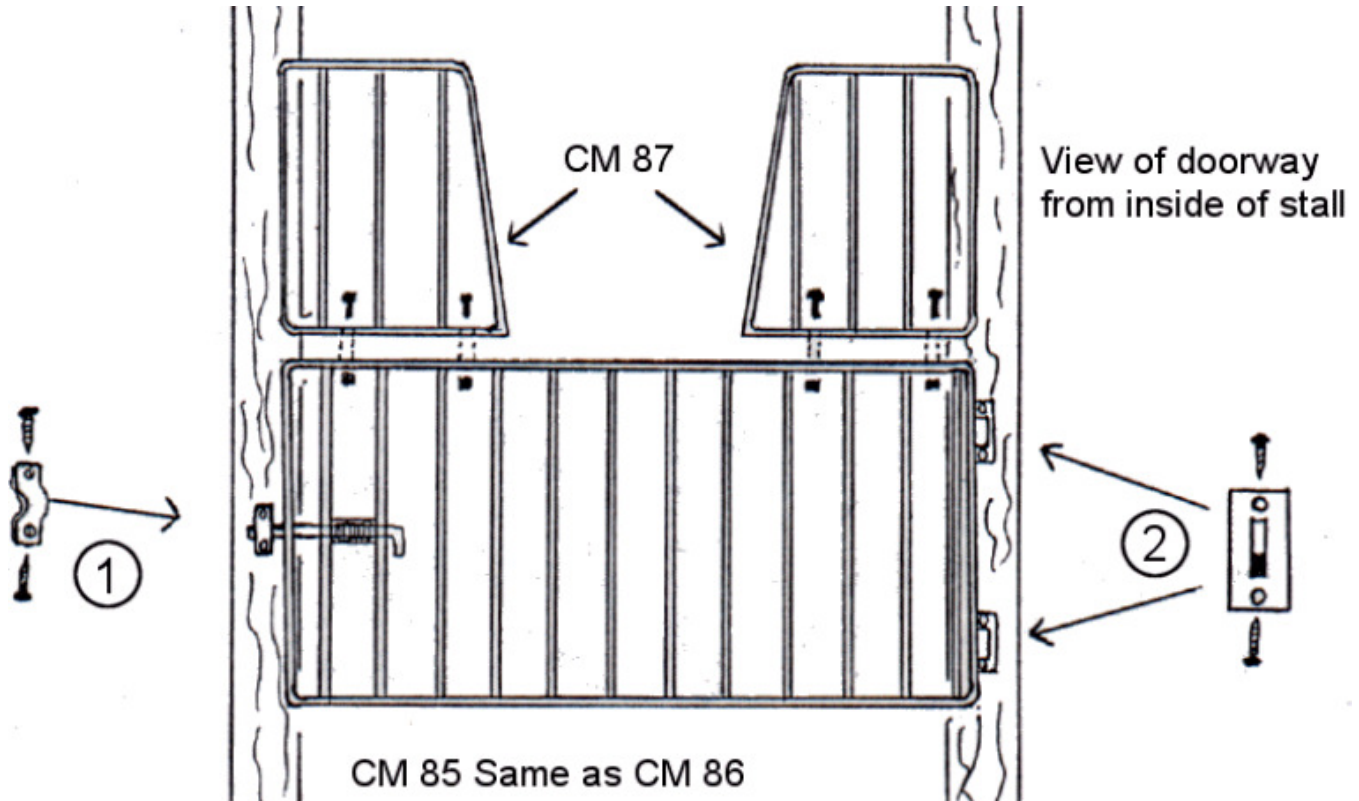

1. Hold door guard on inside of doorway and find desired height for mounting.
2. Slide hinge brackets (2) into place on the Door Guard and mark where holes are positioned. Permanently install both brackets using wood screw.
3. Once brackets are mounted on wall, hang Door Guard in place.
4. With Door Guard in closed position, mark latch bracket (1) holes. Use wood screws to mount bracket in correct position.  
If Model CM 87 Yoke set is being used, bolt to the top of CM 85 or CM 86 with 5/16 bolts, washers, & nuts

## NOTE

1. CM 85 and CM 86 can be installed to hinge from left or right
2. If a combination of CM 85 and CM 86 are used together, it is desirable to use all four hinge points for installation. It is also desirable to use only one of the latch locking brackets for ease of operation.



**Country Manufacturing, Inc.**

P.O. Box 104

Fredericktown, OH 43019

PH: 740-694-9926

FAX: 740-694-5088