


STALL DOOR ASSEMBLY INSTRUCTIONS

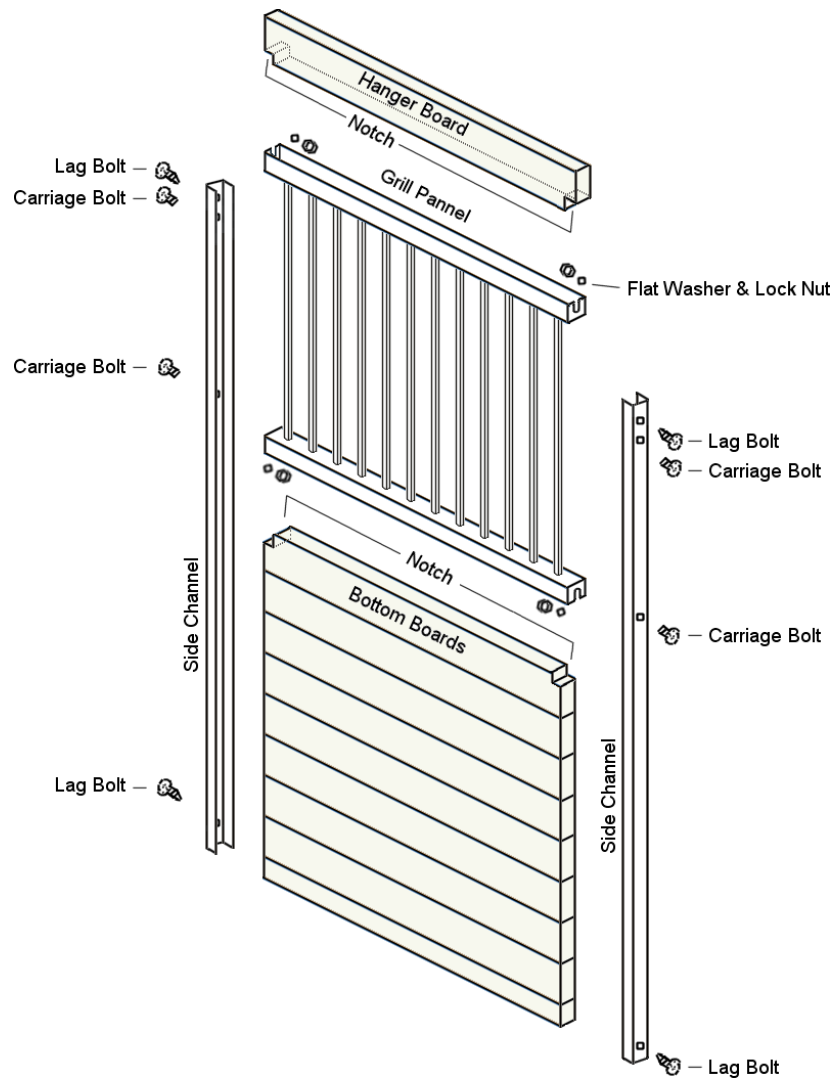

1. Place side channel over one side of grill panel and align middle two holes of side channel with tabs located on grill.
2. Install two 5/16 carriage bolts through outside of side channel and grill tube. Secure with flat washer and lock nut at each location.
3. Repeat steps 1 and 2 for opposite side channel.
4. Insert standard 2 x 6 hanger board into top of grill panel. A notch must be cut from the bottom two corners of this board to clear nuts installed in step 2 above.
5. Using a drill bit, drill hole into each side of board through the top hole located in each side channel.
6. Insert lag bolt to secure top hanger board.
7. Insert lag bolt to secure top hanger board.
8. Repeat steps 5 & 6 for bottom board using the bottom hole on the side channels.
9. Attach hangers (not provided) onto top hanger board in preparation for hanging door onto track.



Country Manufacturing, Inc.

P.O. Box 104

Fredericktown, OH 43019

PH: 740-694-9926

FAX: 740-694-5088